


MATCHING.PDF

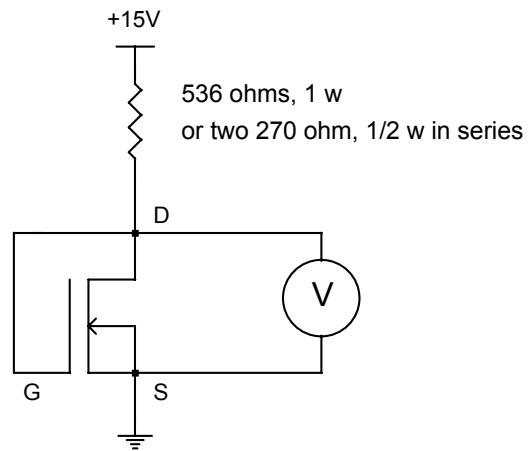

USE A SOCKET FOR THE FET AND LEAVE THE VOLTAGE ON FOR THE DURATION OF THE MATCHING.

CONNECT THE DIGITAL VOLTMETER AS SHOWN.

THE MEASURED VOLTAGE WILL BE AROUND 3 VOLTS AND THE METER RESOLUTION SHOULD BE 1 mV OR BETTER.

SELF-HEATING WILL CAUSE THE METER READING TO CONTINUALLY CHANGE. PLUG IN THE FET, WAIT 10 SECONDS AND RECORD THE READING.

(IT HELPS IF YOU NUMBER THE FETs ON THEIR BACKS WITH A FELT TIP PEN.)